

## Quick start guide SPCevo - How to manage licenses via SPC Connect?

### Content

What are the available upgrade options: .....	2
Process at a glance: .....	2
Prerequisites: .....	2
License upgrade online SPCevo controller.....	3
License upgrade offline SPCevo controller.....	5
How to upgrade the SPCevo controller license? .....	6
Overview of all performed SPCevo license requests .....	7
Authorize an installer to create licenses .....	7

## What are the available upgrade options:

SPC42 → SPC52  
 SPC53 → SPC63  
 SPCPCB-G2 → SPC42  
 SPCPCB-G2 → SPC52  
 SPCPCB-G3 → SPC53  
 SPCPCB-G3 → SPC63

## Process at a glance:

Acre's SaaS solution SPC Connect allows to request and manage license upgrades on demand for the SPCevo controller series. Once a preferred distribution has been selected on the company account settings, authorized persons can perform license upgrades. The system will send out respective confirmation email to involved parties.

License requested triggered by	EMAIL to INSTALLER	EMAIL to COMPANY MANAGER	EMAIL to Distribution partner
Approved engineer (installer)	yes	yes	yes
Company manager	no	yes	yes


## Prerequisites:

- Distribution partner must be selected in the company settings
- Either the company manager or an installer with appropriate rights can perform the licensing
- License upgrade operation available for online and offline controllers
  - o Online: controller is connected to SPC Connect via FlexC ATS
  - o Offline: controller is not connected to SPC Connect (e.g. part of a high-sec network)

## License upgrade online SPCevo controller


Navigate to **Hardware / Panels**

- The select the controller which should be updated

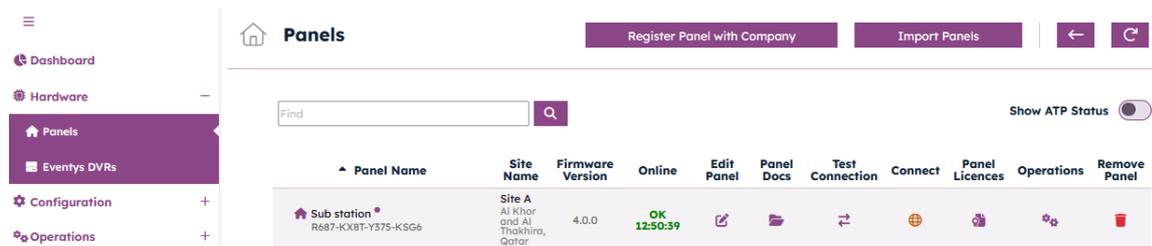


The screenshot shows the 'Panels' management page. On the left is a navigation menu with 'Panels' selected. The main area has a search bar and a table of panels. The table has columns for Panel Name, Site Name, Firmware Version, Online status, and various action buttons. One panel is visible: 'Sub station' (R687-KX8T-Y375-KSG6) at 'Site A' (Al Khor and Al Thakhira, Qatar) with firmware version 4.0.0 and an online status of 'OK 12:50:39'.

- Click on **Panel Licenses** and on the next page to the **Plus sign** 

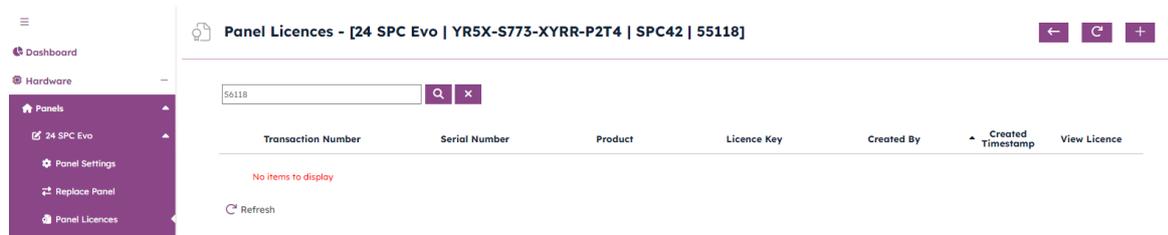

The screenshot shows the 'Panel Licences' page for a specific panel. It features a search bar containing '56118'. Below the search bar is a table with columns: Transaction Number, Serial Number, Product, Licence Key, Created By, Created Timestamp, and View Licence. The table currently displays 'No items to display' and a 'Refresh' button.

- Fill in the form and accept mandatory checks to obtain a license code

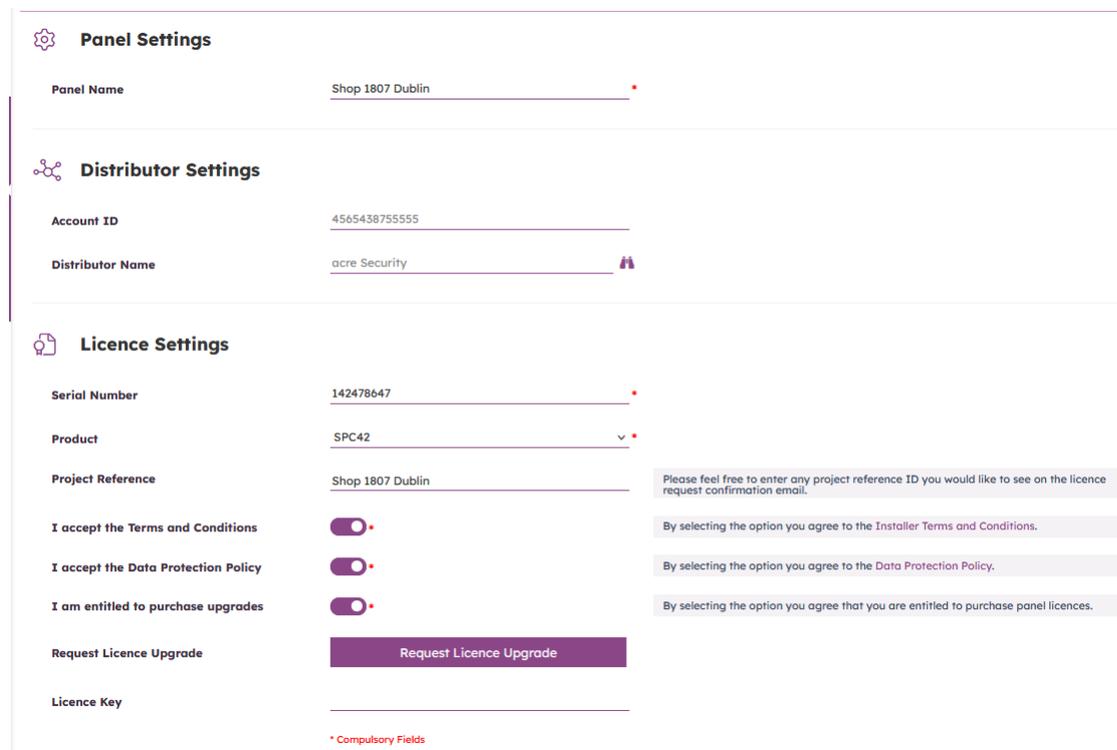


The screenshot shows the 'Panel Settings' form. It is divided into three sections:
 

- Panel Settings:** Panel Name: Shop 1807 Dublin
- Distributor Settings:** Account ID: 4565438755555; Distributor Name: acre Security
- Licence Settings:** Serial Number: 142478647; Product: SPC42; Project Reference: Shop 1807 Dublin. There are three checkboxes for accepting terms and conditions, all of which are checked. A 'Request Licence Upgrade' button is visible. A 'Licence Key' field is at the bottom.

 A note at the bottom indicates '\* Compulsory Fields'.

# SPCevo Controller Series

 - Click on **Request License Upgrade** and confirm it by click on **OK**



- Write down the license code and follow the instructions at the section "How to upgrade the SPCevo controller license?"

License Key

`HzcZ0KKQdNvOchWrHjxJ`


## License upgrade offline SPCevo controller

Navigate to **Configuration / Company / Licenses**


- Click on **Create Offline panel license** 



- Fill in the form and accept the mandatory checks to obtain a license code.

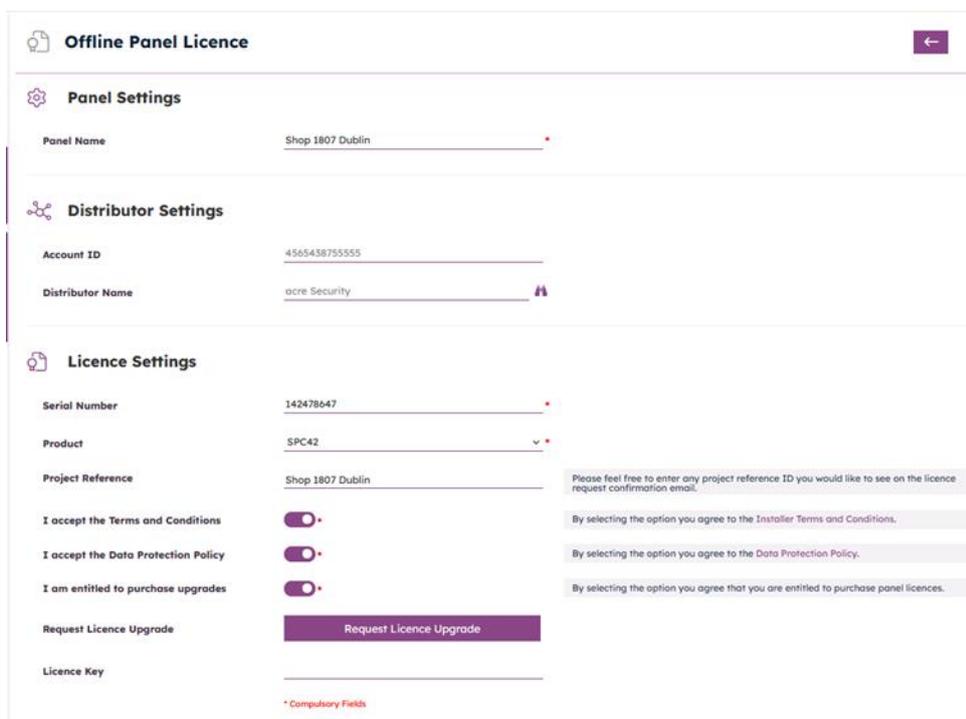

- Click on **Request License Upgrade** and confirm it by click on **OK**

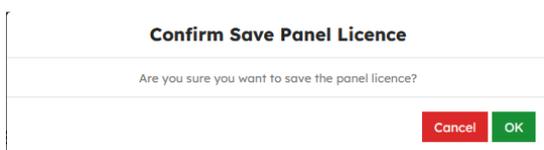


- Write down the license code and follow the instructions at the section "How to upgrade the SPCevo controller license? "

Licence Key [H2cZ0KKQdNvOchWrHjx.J](#)

## How to upgrade the SPCevo controller license?

Establish a connection with the SPCevo controller (local or connection via SPC Connect) and Navigate to **Configuration / Advanced / License**

- Enter the obtained license code and click on **Save** to activate the license

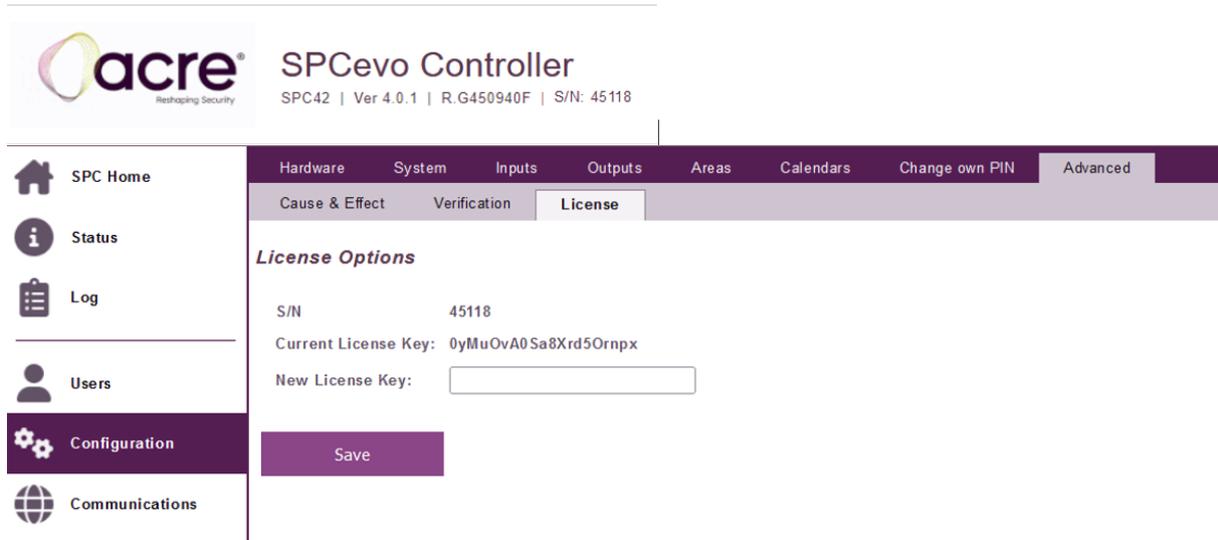

The screenshot shows the SPCevo Controller web interface. The top header displays the acre logo and the controller model 'SPCevo Controller' with details: 'SPC42 | Ver 4.0.1 | R.G450940F | S/N: 45118'. A navigation menu on the left includes 'SPC Home', 'Status', 'Log', 'Users', 'Configuration', and 'Communications'. The main content area has tabs for 'Hardware', 'System', 'Inputs', 'Outputs', 'Areas', 'Calendars', 'Change own PIN', and 'Advanced'. Under the 'Advanced' tab, there are sub-tabs for 'Cause & Effect', 'Verification', and 'License'. The 'License' sub-tab is active, showing 'License Options' with the following information: S/N: 45118, Current License Key: 0yMuOvA0Sa8Xrd5Ornpx, and a field for 'New License Key:'. A 'Save' button is located below the input field.

- After updating, the new SPCevo controller type is displayed



The screenshot shows the SPCevo Controller web interface after an update. The top header displays the acre logo and the controller model 'SPCevo Controller' with details: 'SPC63 | Ver 4.0.1 | R.G450940F | S/N: 45118'.

