

Digital Signage

Introduction

RoomCast E2 can be used as digital signage, displaying information such as corporate culture promotion, corporate announcements, and welcoming external visitors. After connecting RoomCast E2 to Yealink Device Management Platform (YDMP), you can bind the device to the conference room on the Yealink Management Cloud Service (YMCS) to play digital signage content.

Before You Begin

Add RoomCastE2 to the YMCS and bind the conference room. For details on how to add it, please refer to: [Add RoomCast to the YMCS](#) .

How to Use

1. Enter the RoomCast E2 web user interface, and click **System > Device Manage**.
2. Configure the server address in the Auto Update section.

Yealink | RoomCast E2

English (United States) ▼

admin

⏻

Status

Basic

Network

System

Date&Time

Display

Backup & Restore

Yealink Cloud Service

Update

Device Manage

System Diagnostic

Application

Security

Device Manage

3rd DM Service

TCP/IP Security
Enabled

Current Control TCP
Port 6024

TCP/IP Authentication
Password

HTTPS API

HTTPS Authentication
Password

Auto Provision

DHCP Active

Custom Option

DHCP Option Value
yealink

Server URL
[https://us-resource.ymcs.yealink.com/hardware/autop/\\$MAC.boot](https://us-resource.ymcs.yealink.com/hardware/autop/$MAC.boot)

Username

Password

Attempt Expired
Time(s) 5 (1-300)

Confirm

Cancel

3. Enter **Basic**, select **YDS** in enable digital signage column, and click **Confirm**.

The screenshot shows the 'Basic' settings page for a Yealink RoomCast E2 device. The left sidebar contains navigation options: Basic (selected), Network, System, and Security. The main content area is divided into several sections:

- Screen Cast**: Includes toggles for Yealink Pod, USB-C Plug-and-play, Miracast, Casting Key, and AirPlay. AirPlay Mode is set to AP Mode. There is a checkbox for 'Cast from WAN Port' and a PIN Validation section with a PIN validity of 60 seconds.
- LED Control**: Includes a toggle for the LED Indicator.
- Digital Signage**: The 'Enable Digital Signage' dropdown is highlighted with an orange box and set to 'YDS'. The 'Screensaver Timeout' is set to '1 min'.
- Display Settings**: Includes a 'Large Font Mode' toggle, 'On-Screen Language' set to 'English (United States)', 'Meeting Room Name/Host Name' set to 'RoomCast E2', and various display toggles like 'Display Top Bar', 'Display IP Address', 'Display AP Name', 'Display Time', and 'Display Brand Logo'.

At the bottom right, there are 'Confirm' and 'Cancel' buttons.

4. After the screen saver waiting time, the digital signage configured on the server will be pushed to the device.

NOTE

The content management of digital signage needs to be set up in the YMCS. For more information, please refer to: [Set Digital Signage](#).

Customize Digital Signage

1. Enter the web interface of RoomCast E2, click **Basic**, and select **Custom** in Enable Digital Signage.
2. Enter the URL address you want to use as a digital sign and click **Confirm**.
3. After the screen saver waiting time, the set URL content will be pushed to the device.