



Scan for full manual

DSP-62-AEC Quick Start Guide


This guide helps you install and use your DSP-62-AEC for the first time.

Go to www.kramerav.com/downloads/DSP-62-AEC to download the latest user manual and check if firmware upgrades are available.

Step 1: Check what's in the box

- ✓ DSP-62-AEC Digital Sound Processor
 - ✓ 1 Power adapter and cord
- ✓ 1 Kramer C-USB/AB-6 cable
 - ✓ 1 Quick start guide
- ✓ 4 Rubber feet
 - ✓ 1 Bracket set

Step 2: Get to know your DSP-62-AEC

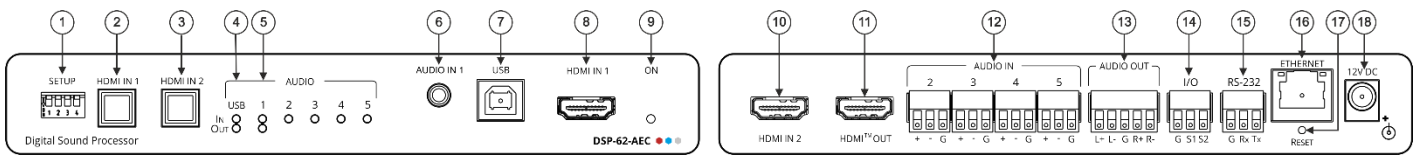


#	Feature	Function	
1	SETUP DIP-switches	Set DIP-switch 4 to ON to upgrade the firmware, OFF (default) for normal operation (other DIP-switches are reserved for future use).	
2	HDMI IN 1 Button	Press to select HDMI IN 1 input (on the front panel).	
3	HDMI IN 2 Button	Press to select HDMI IN 2 input (on the rear panel).	
4	AUDIO LEDs	USB IN	Lights green when an audio source is received from the USB host port.
		USB OUT	Lights green when an audio signal is sent to the USB host port.
		IN (1 to 5)	Lights green when a signal is present, lights red when clipping is detected. For IN 2 to IN 5, when connecting a microphone and setting to Mic mode via the embedded Web pages, lights blue.
		OUT	Lights green when a signal is present, lights red when clipping is detected.
6	AUDIO IN 3.5mm Mini Jack	Connect to an unbalanced audio source.	
7	USB Type B Bi-Directional Host Port	Connect to an audio source or acceptor.	
8	HDMI IN 1 Connector	Connect to an HDMI source.	
9	ON LED	Lights green when the device is powered.	
10	HDMI IN 2 Connector	Connect to an HDMI source.	
11	HDMI™ OUT Connector	Connect to an HDMI acceptor.	
12	AUDIO IN 3-pin Terminal Block Connectors (2 to 5)	Connect to up to 4 mono balanced audio sources (mono or mic level with selectable 48V).	
13	AUDIO OUT 5-pin Terminal Block Connector	Connect to a stereo balanced audio acceptor.	
14	I/O Terminal Block Connectors (1 to 2)	Connect to up to two sensors, switches, LEDs, or relays.	
15	RS-232 (G, Rx, Tx) Terminal Block Connector	Connect to a PC/serial controller	
16	ETHERNET RJ-45 Connector	Connect to a PC via a LAN.	
17	RESET Recessed Button	Press and hold while powering the device to reset to factory default values, including IP settings.	
18	12V DC Power Connector	Connect to the power supply and to the mains electricity.	

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Step 3: Mount DSP-62-AEC

Install **DSP-62-AEC** using one of the following methods:


- Attach the rubber feet and place the unit on a flat surface.
- Fasten a bracket (included) on each side of the unit and attach it to a flat surface (see www.kramerav.com/downloads/DSP-62-AEC).
- Mount the unit in a rack using the recommended rack adapter (see www.kramerav.com/product/DSP-62-AEC).
- Mount the unit in a Kramer Table-Mount unit (see www.kramerav.com/product/DSP-62-AEC).

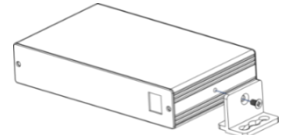

- Ensure that the environment (e.g., maximum ambient temperature & air flow) is compatible for the device.
- Avoid uneven mechanical loading.
- Appropriate consideration of equipment nameplate ratings should be used for avoiding overloading of the circuits.
- Reliable earthing of rack-mounted equipment should be maintained.
- Maximum mounting height for the device is 2 meters.


Step 4: Connect inputs and outputs

Always switch OFF the power on each device before connecting it to your **DSP-62-AEC**.

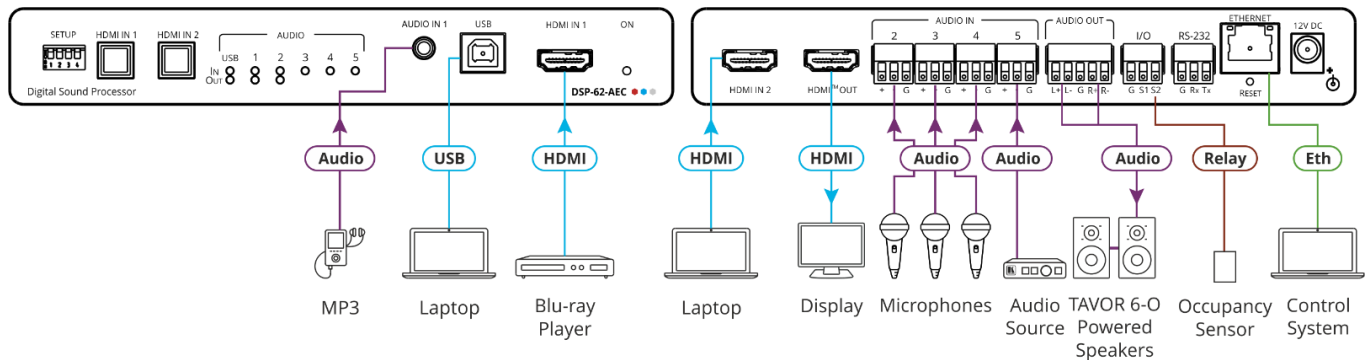


Connecting the audio output

To a balanced stereo audio acceptor:

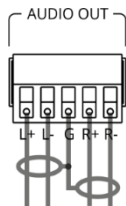

To an unbalanced stereo audio acceptor:

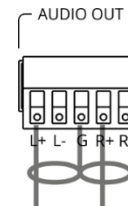

To achieve specified extension distances, use the recommended Kramer cables available at www.kramerav.com/product/DSP-62-AEC. Using third-party cables may cause damage!

Step 5: Connect power

Connect the power cord to **DSP-62-AEC** and plug it into the mains electricity.

Safety Instructions (See www.kramerav.com for updated safety information)

Caution:

- For products with relay terminals and GPIO ports, please refer to the permitted rating for an external connection, located next to the terminal or in the User Manual.
- There are no operator serviceable parts inside the unit.

Warning:

- Use only the power cord that is supplied with the unit.
- Disconnect the power and unplug the unit from the wall before installing.

Step 6: Operate the DSP-62-AEC

Operate **DSP-62-AEC** via:

- Embedded web pages via the Ethernet.
- RS-232 serial commands transmitted by a touch screen system, PC, or other serial controller.

RS-232 Control / Protocol 3000			
Baud Rate:	115,200	Parity:	None
Data Bits:	8	Command Format:	ASCII
Stop Bits:	1		
Example: (adjust analog audio output 1 to "-10dB"): #x-aud-1vl out.analog_audio.1.audio.1,-10			
Default Ethernet Parameters			
IP Address:	192.168.1.39	UDP Port #:	50000
Subnet mask:	255.255.0.0	TCP Port #:	5000
Gateway:	192.168.0.1	User/Password	Admin/Admin
Factory Reset			
Recessed Button	Press and hold while powering the device.		
Protocol 3000:	"#factory" command.		
Web Pages:	In the Settings page, click Reset.		