Aqiila[®]

Portable Air Pump

User Manual



Portable Air Pump

Thank you for purchasing mini electric air pump. Please read this user manual carefully before using the product and keep it properly for reference.


1. Packing list

1x Portable air pump	
3 x Nozzle(Small/Medium/Large)	
1x Vacuum valve	
1x Type-c cable	
1x User manual	
1x Storage bag	

2. Specification

Build-in Lithium Battery	2x1200 mAh / 7.4V / 8.8 Wh
USB Charging	5V-2A
Maximum Power	35W
Output Pressure	3-4 Kpa
Working Temperature	-10~45°C
No-load Flow	180-200L /min
Dimension	50x50x87.8mm
Weight	161g

3. Diagram

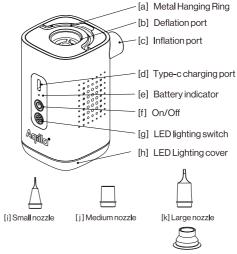

[1] Vacuum nozzle

4. How to use

Inflation/deflation starts. 5 short press to turn off. 6 long press 3 second to turn off pump = led off

4.1 Power On/Off

Power on: Press and hold the [f] power button for 3 seconds, the battery indicator will light up. Air pump started successfully. Power off: Press and hold the [f] power button for 3 seconds, the battery indicator will turn off. Shut down successfully.

4.2 Inflation/Deflation

Start inflation or deflation: short press the [f] button. Turn off inflation or deflation: press the [f] button again.

4.3 How To Install Nozzles

For Inflatables

Choose a suitable nozzle when deflating and install it to top inlet (b). Choose a suitable nozzle when inflating and install it to the side outlet (c).



Nozzles: Small/Medium/Large

For Storage Bag

When pumping, select [j] medium nozzle and [l] Vacuum nozzle, and install it to the inlet (b) at the top.



Nozzles: Medium+Vacuum nozzle

-02-

Note: When using the small nozzle for inflation, the valve of swimming pool needs to be opened by the tip of small nozzle. So that can inflate quickly. As shown below.






Use the tip of small nozzle to open valve of inflatables

Open the first valve, and use the medium nozzle to inflate. As shown below





Open the second valve, and uses the medium nozzle and the vacuum nozzle, which can quickly inflate. As shown below.




4.4 LED Light

With dimming function, tap [g] to turn on the LED light. There are three modes: weak, strong, and SOS. In SOS mode, tap [g] key again to turn the light off.

4.5 Metal Hanging Ring

After turning on the LED night light, lift the ring [a] to hang the air pump for night lighting.



6 Attention

- *Donnot use the pump when anything abnormal occurs in check before using.
- *Keep the air intake unblocked to ensure a smooth air flow.
- *The pump could be high temperature or utter a abnormal sound during using. Please turn it off to cool down. And donnot use it again until it becomes cool.
- *Donnot leave away from the product when using.
- *Keep away from combustible and explosives.
- *Avoid moisture, sand and falling.
- *Do not store the product in a place that is too cold or hot.
- *Since the inflator is equipped with lithium battery, do not put it into fire or discard casually.
- *Keep it away from children.



Visit aqiila.eu and download the manual to your device.



Get in touch: www.agiila.eu l hello@agiila.eu

Contact: GPBM Nordic AB | Sörredsvägen 113 | 418 78 Göteborg | Sweden

Contact: Brands Services B.V. | Florijn 14-16 5751 PC Deurne | The Netherlands



04- -05-